



E-Z Storm Window Set

Directions for Installing


Note: When installing SA 01 Storm Stays, skip steps 1. and 2.

1. Install retainer clips - bore 3/16 in. hole in the storm window or screen sash (hereafter referred to as "the storm") on each side, about 12 inches up from bottom and as near glass or screen as possible. Insert carriage bolts from the outside. Assemble clip and then wing nut on end of bolt.
2. Put the storm in position on the outside window casing or blind stop and secure firmly in place by tightening up retaining clips on the inside (a second set of hands is very helpful for this step.)
3. With storm firmly secured in place, mount hooks on the window casing setting the screws 2 inches above the upper rail of the storm with the outside edge of each hook in line with the side edge of the storm
4. Place hangers on hooks and screw hangers to the storm.

Whenever installing storms, remember to set the hardware such that the storm is lifted 1/16" to 1/8" off the sill to allow for moisture to escape and prevent sill rot. This is perhaps the single most crucial element to increasing the longevity of your windows.

Note: Hangers may be used on storms of different thickness by bending them so as to give the proper tension when the storm is in place. Eastern Style hangers may be made to fit Western Style storm windows by bending hangers back to the proper position. See below.


E-Z IMPROVED

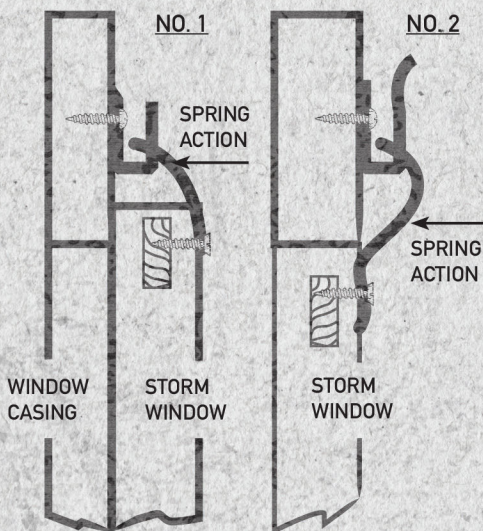

Eastern Style
Hangs Storm
Sash Against
Casing


Western Style
Hangs Storm
Sash Flush
With Casing

NON-RATTLE

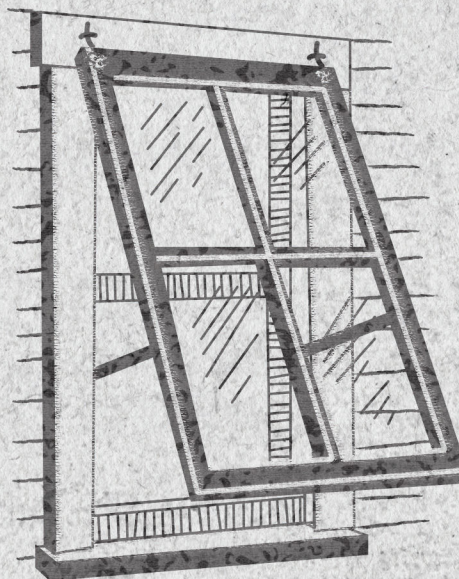

Storm Window with Hangers and
SA 01 Storm Stays in Ventilating
Position

HANGERS AND FASTENERS

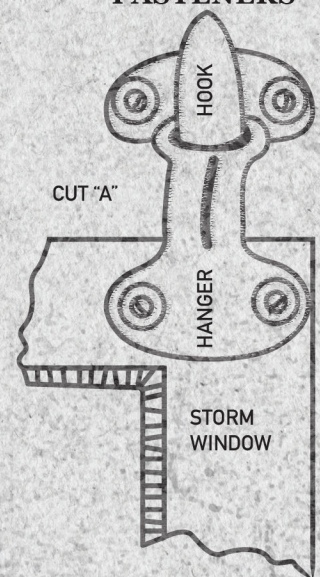

Hanger on Storm
Sash With Hook
Above on Casing